

Maintenance Instruction

CU 5000 series



Maintenance recommendations:

- **Wear full protective gear during maintenance**
- Always act according to the safety instructions as supplied with each tool!

Necessary equipment: WD-40, soft cloth, Teflon lubrication oil, Philips screw driver

After use (every time)

Revision 04-17

Contact the Holmatro dealer if one of the items does not function properly!



Step 1

- Check the general condition of the tool
- Check for oil leakage (clean/dry the tool with a soft cloth)
- Check the readability of the identification / safety label, replace if unreadable
- Lightly oil steel parts with preservative oil WD40 before storing
- Store the tool with the tips of the blades overlapping as shown in the picture



Step 2

Check:

- The proper functioning of the deadman's handle
- The control handle moves smoothly
- The control handle returns to the neutral position
- The dust cap is firmly attached

Holmatro Rescue Equipment B.V. | P.O. Box 33 | 4940 AA Raamsdonksveer, the Netherlands | T +31 (0)162 589200 | rescue@holmatro.com | www.holmatro.com

While the greatest care has been devoted to the content, it is possible that the information in this printed matter is incorrect or incomplete. N.V. Holmatro and its affiliated companies (hereafter: Holmatro) cannot be held liable in any way for the consequences of activities undertaken on the basis of this printed matter. If you have any doubts about the correctness or completeness of the information, you shall contact Holmatro. Nothing from this printed matter can be copied and/or made public in any way without the explicit authorization of Holmatro.

Maintenance instruction

CU 5000 series

After use (every time)

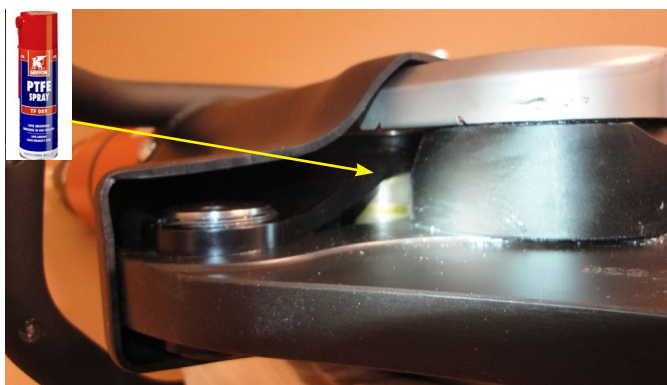
Revision 04-17

**Step 3**

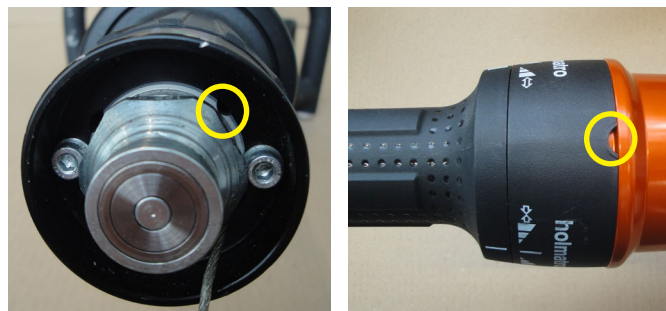
- Check the coupler and dust cap for damage, dirt and or oil leakage
- Clean coupler with a soft cloth. If necessary with water and soap
- If necessary grease with WD-40
- Check the functioning of coupler

**Step 5**

- Check the carrying handle for damage and that it is firmly fastened to the tool
 - Check the functioning of the intergrated lights
- Note:** if lights stay on for approximately 5 seconds before they switch off, replace battery (AA type)

**Step 7**

Spray Teflon lubrication oil on the center hinge pin where the levers are installed.

**Step 4**

Check the back of the control handle for oil, this will indicate that the safety valve has been activated during use.

Left-hand picture: 4000 serie control handle, opening in the back.

Right-hand picture: 5000 serie control handle, opening in the bottom.

**Step 6**

- Check the blades for damage
- Check the smalley rings for presence and damage
- Spray Teflon lubrication oil on and between the moving parts
 - The center bolt
 - The hinge pins
 - The blades

Note: open and close the blades while spraying Teflon lubrication oil.

Holmatro Rescue Equipment B.V. | P.O. Box 33 | 4940 AA Raamsdonksveer, the Netherlands | T +31 (0)162 589200 | rescue@holmatro.com | www.holmatro.com

While the greatest care has been devoted to the content, it is possible that the information in this printed matter is incorrect or incomplete. N.V. Holmatro and its affiliated companies (hereafter: Holmatro) cannot be held liable in any way for the consequences of activities undertaken on the basis of this printed matter. If you have any doubts about the correctness or completeness of the information, you shall contact Holmatro. Nothing from this printed matter can be copied and/or made public in any way without the explicit authorization of Holmatro.

Maintenance instruction

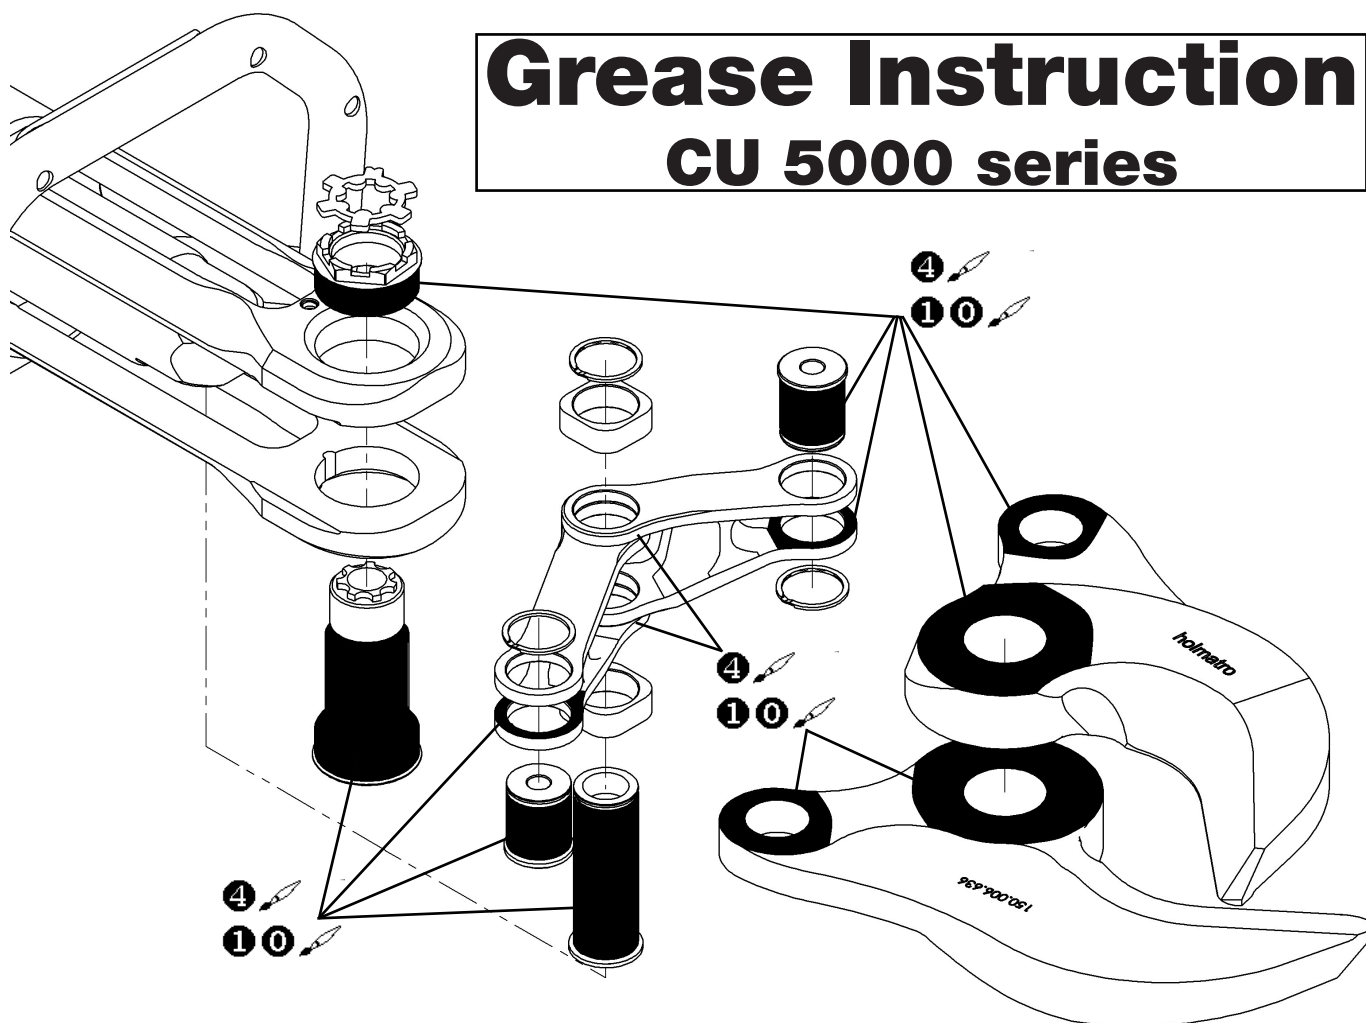
CU 5000 series

Annual (or after 100 hours of use)

Revision 04-17

Grease Instruction

CU 5000 series



- ④ Teflon lubrication oil
(for greasing without disassembling, after use and monthly)
- ⑩ Molyube 26 HD-EP only (yearly)

Holmatro Rescue Equipment B.V. | P.O. Box 33 | 4940 AA Raamsdonksveer, the Netherlands | T +31 (0)162 589200 | rescue@holmatro.com | www.holmatro.com

While the greatest care has been devoted to the content, it is possible that the information in this printed matter is incorrect or incomplete. N.V. Holmatro and its affiliated companies (hereafter: Holmatro) cannot be held liable in any way for the consequences of activities undertaken on the basis of this printed matter. If you have any doubts about the correctness or completeness of the information, you shall contact Holmatro. Nothing from this printed matter can be copied and/or made public in any way without the explicit authorization of Holmatro.



Holmatro Group
World Headquarters
Raamsdonksveer, The Netherlands



Holmatro Netherlands
Rescue equipment
Raamsdonksveer, The Netherlands

E holmatroservice@holmatro.com



Holmatro USA
Glen Burnie, MD, U.S.A.
Manufacturing, sales & service

E holmatroservice@holmatro.com



Holmatro UK
Nottingham, UK
Sales & service

E holmatroservice@holmatro.com



Holmatro China
Suzhou, Jiangsu Province, China
Sales & service

E holmatroservice@holmatro.com



Holmatro Poland
Warsaw, Poland
Sales & service

E holmatroservice@holmatro.com

www.holmatro.com