

Maintenance recommendations after use (every time)

Wear full protective gear during maintenance!

Always act according to the safety instructions as supplied with each pump!

- For: H/FTW 1800 and HTT 1800, twin and Core™ connections
- Necessary equipment: Hydraulic oil, funnel, pressure gauge.



Step 1

- Check general condition pump.
- Check for traces of oil leakage.



Step 2

- Check coupler(s) and dust cap(s) for dirt and/or oil leakage.
- Clean coupler(s) with a clean and soft cloth, if necessary with water and soap.
- If necessary grease with hydraulic oil.
- Check function coupler(s), see page 5.
- Reconnect loose dust cap(s) to coupler(s).



Step 3

- Check the oil level, which should be between the minimum and maximum line on the dipstick.



Step 4

- Refill if necessary.



Step 5

- Storage: Return the pump handle to its horizontal position and lock with hook.
- Pump can be stored horizontally and vertically with couplers facing downwards.

Manufacturing sales & service worldwide

Holmatro Rescue Equipment
 P.O. Box 33, 4940 AA Raamsdonksveer
 The Netherlands
 T + 31 (0)162 - 58 92 00
 F + 31 (0)162 - 52 24 82
 E info@holmatro.com
 www.holmatro.com

Manufacturing sales & service U.S.A., Canada and Latin America

Holmatro, Inc.
 505 McCormick Drive, Glen Burnie, MD
 21061 U.S.A
 T + 1 - 410 - 768 - 9662
 F + 1 - 410 - 768 - 4878
 E info@holmatro-usa.com
 www.holmatro-usa.com

© Holmatro®

06-12

While the greatest care has been devoted to the content, it is possible that the information in this printed matter is incorrect or incomplete. Holmatro N.V. and its affiliated companies (hereafter: Holmatro) cannot be held liable in any way for the consequences of activities undertaken on the basis of this printed matter. If you have any doubts about the correctness or completeness of the information, you shall contact Holmatro (phone number: +31 (0)162-589200).

Nothing from this printed matter can be copied and/or made public in any way without the explicit authorisation of Holmatro.