



UNIVERSAL MOUNT P/N 1007


INSTALLATION INSTRUCTIONS

For additional assistance call 888-514-0083 between 8AM-5PM EST or email: info@pactoolmounts.com

CAUTION

To avoid the risk of personal injury, property damage or product damage, please use the included fasteners for mounting.

- * The bracket must be securely mounted to a stable surface and material.
- * When mounting bracket to PAC TRAC aluminum products **P/N 7000**, **P/N 7020**, **P/N 7040**, **P/N 7050** with the included Trac Lok inserts **P/N 7016**, torque the screws to a maximum 15 in-lbs.
- * PAC recommends regular and frequent inspections to be certain of proper operation and installation.

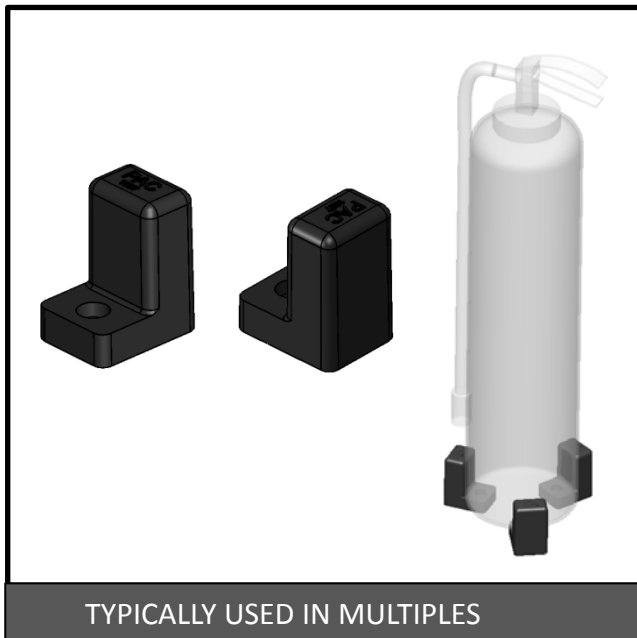

MTG. HARDWARE			QTY
PAC Fastener Packet P/N 7051			
	P/N 3017	¼-20 x 1 SS Pan Head Screw	1
	P/N 2069LN	¼-20 Nylok Nut	1
	P/N 2046	#10-24 x 1 SS Pan Head Screw	1
	P/N 2054	#10 S.S. Flat Washer	1
	P/N 7016	Trac Lok Insert	1

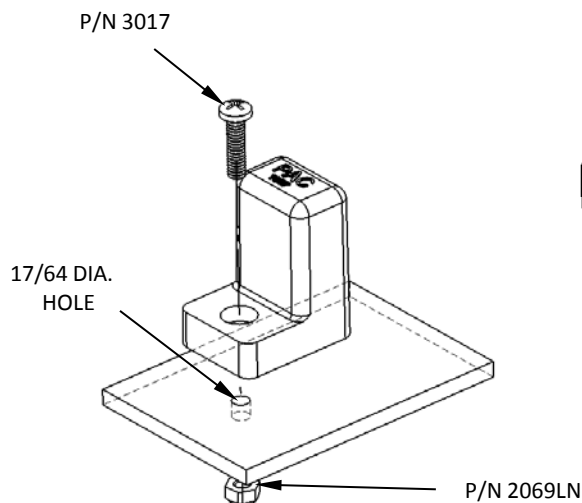


FIGURE 1
(Thru Mounting Method)

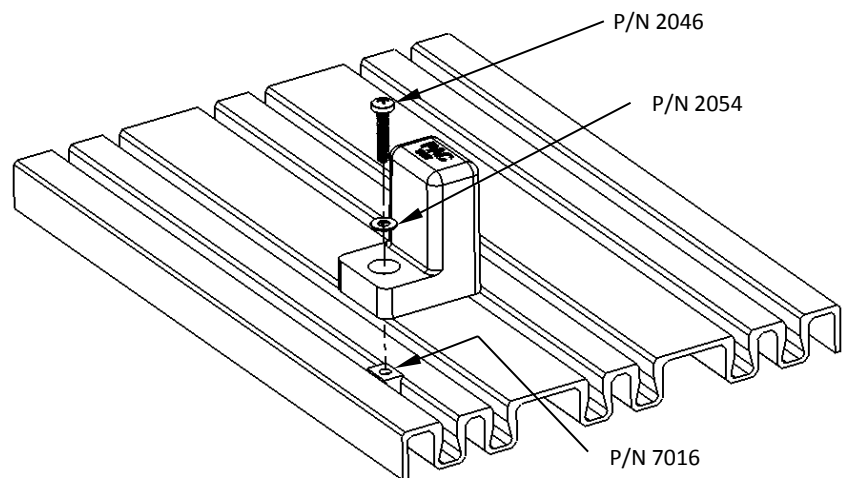


FIGURE 2
(PAC TRAC Mounting)