

**GM HOOK P/N 1028****INSTALLATION INSTRUCTIONS**

For additional assistance call 888-514-0083 between 8AM-5PM EST or email: info@pactoolmounts.com

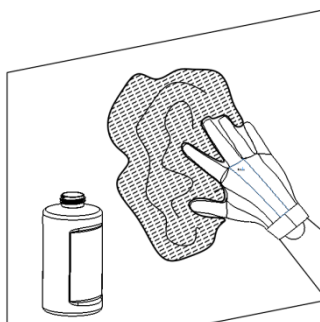
CAUTION

To avoid the risk of personal injury, property damage or product damage, please use the included fasteners for mounting.

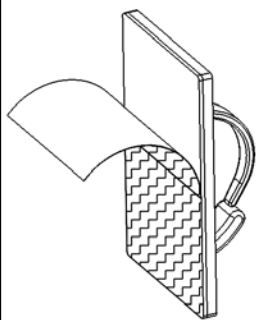
- * The bracket must be securely mounted to a stable surface and material.
- * PAC recommends regular and frequent inspections to be certain of proper operation and installation.



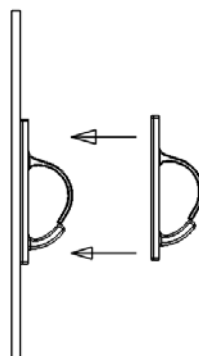
NO DRILLING OR FASTENERS REQUIRED

Step #1 – Clean Surface

Fully clean the surface with a solution consisting of 50% water-50 % isopropyl alcohol.

Step #2 – Remove Tape Backing

Peel the backing from the double sided tape and prepare to affix to mounting surface.

Step #3 – Attach to Surface

Firmly and evenly press bracket to the mounting surface and apply pressure

Wait 72 hours before use to allow bond to fully set.

NOTE: Mounting surfaces must be free of dirt, oils and grease. Surfaces must be flat and smooth and free of voids or protrusions for maximum performance.

**GM HOOK P/N 1028****INSTALLATION INSTRUCTIONS**

For additional assistance call 888-514-0083 between 8AM-5PM EST or email: info@pactoolmounts.com

REMOVAL OF PART**Step 1**

Use a heat gun or blow dryer to warm the surfaces that are taped together. This will loosen the bond of the tape. Heat just until the surface is hot to the touch.

Step 2

Carefully pull the taped surfaces apart. Attempt to remove the tape by grasping the edge of it with your fingers and pulling away from the surface. Remove as much tape as possible using this method.

Step 3

Scrape off any leftover sections of tape and residue. Take care not to scratch surfaces.

Step 4

If any glue residue remains, apply a solvent adhesive remover to clean the mounting surface. Choose a solvent that won't damage the mounting surface