



Maintenance after use | CT 5150, (G)CT 5160 | 19345

Page 1 of 3

Maintenance recommendations:

- **Wear full protective gear during maintenance.**
- Always act according to the safety instructions as supplied with each tool!

Necessary equipment: Teflon lubrication oil or WD40, soft cloth, Philips screwdriver.

Note: The Greenline EVO 3 back-end has a separate maintenance instruction!

Contact the Holmatro dealer if one of the items does not function properly!



Step 1

- Check the general condition of the tool
- Check for oil leakage (clean/dry the tool with a soft cloth)
- Check the readability of the identification / safety label, replace if unreadable
- Lightly oil steel parts with preservative oil WD40 before storing
- Store the tool with the tips of the blades open for 5 -10 mm



Step 2

Check:

- The proper functioning of the dead man's handle
- The control handle moves smoothly
- The control handle returns to the neutral position
- The dust cap is firmly attached

Holmatro Rescue Equipment B.V. | P.O. Box 33 | 4940 AA Raamsdonksveer, the Netherlands | T +31 (0)162 589200 | rescue@holmatro.com | www.holmatro.com

While the greatest care has been devoted to the content, it is possible that the information in this printed matter is incorrect or incomplete. N.V. Holmatro and its affiliated companies (hereafter: Holmatro) cannot be held liable in any way for the consequences of activities undertaken on the basis of this printed matter. If you have any doubts about the correctness or completeness of the information, you shall contact Holmatro. Nothing from this printed matter can be copied and/or made public in any way without the explicit authorization of Holmatro.

**Step 3**

- Check the coupler and dust cap for damage, dirt and or oil leakage
- Clean coupler with a soft cloth. If necessary with water and soap
- If necessary lubricate with WD-40
- Check the functioning of the coupler

**Step 4**

- Check the bottom of the control handle for oil, this will indicate that the return line safety valve has been activated during use.

**Step 5**

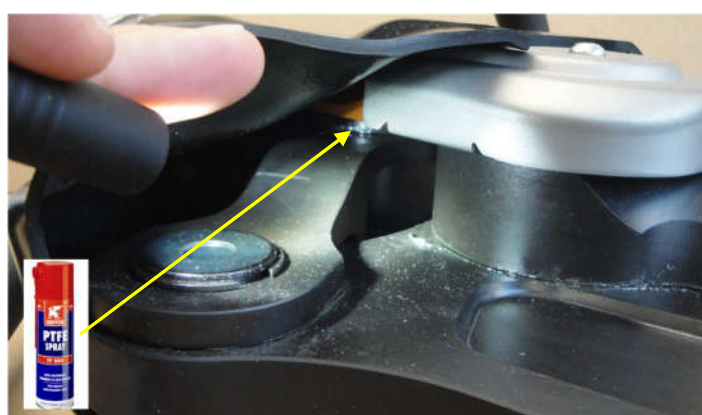
- Check the carrying handle for damage and that it is firmly fastened to the tool
- Check the functioning of the integrated lights Note: if lights stay on for approximately 5 seconds before they switch off, replace battery (AA type).

**Step 6**

- Check the removable tips for wear and tear
- Check the function of the pins that secure the tips to the blades
- Spray a little Moly-lube coating spray on the inside of the tips and on the pin
- Note: the pins are retained by the screw indicated in the right-hand corner picture, preventing it coming out the tips completely.

**Step 7**

- Check the blades for damage
- Check the snap rings for presence and damage
- Spray Teflon lubrication oil on and between the moving parts:
 - The center bolt
 - The hinge pins
 - The blades

**Step 8**

- Spray Teflon lubrication oil on the guide pin where the levers are installed.

Grease instructions.

